 



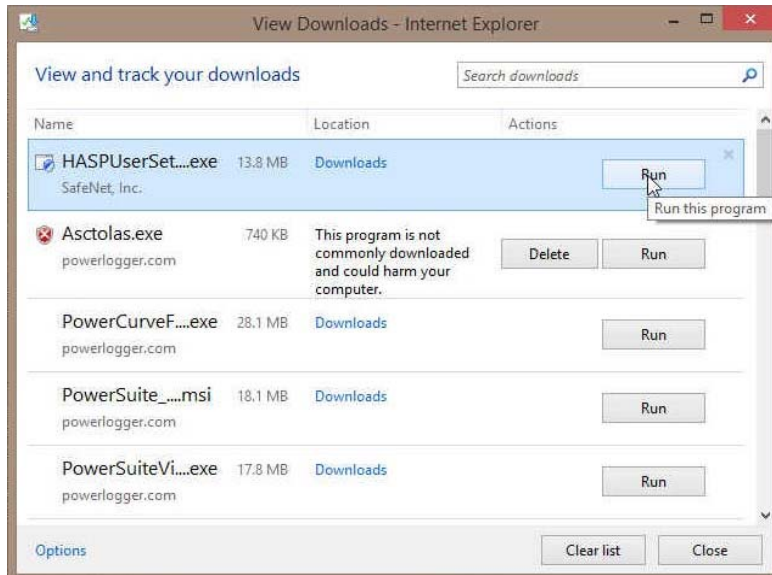
## HASP Driver Download and Installation Procedures

 


 
- 1.) **Click** on the **Windows HASP Driver selection** from the downloads page [www.powerlogger.com/downloads.asp](http://www.powerlogger.com/downloads.asp).
- 2.) This will activate the download file **HASPUserSetup.exe**.




 
- 3.) **Click** on the  **button** and the file will be saved to your download folder.
- 4.) **Click** on the  **button**. This will activate the View Downloads Window.




 
- 5.) **Highlight** the **HASPUserSetup.exe** file and **Click** on the  **button**. This will start up the Install Wizard.


- 6.) This will activate the Hasp Device Driver Installation Welcome window. **Click** on the  **button.**




- 7.) This will activate the End User License Agreement for the Hasp Driver. **Click** on the radio button  beside **I accept the license agreement.** Then **click** on the  **button.**

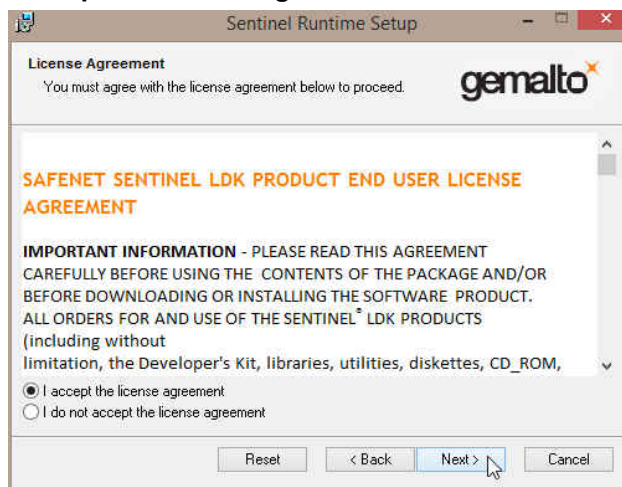

- 8.) This will initiate the Ready to install window. **Click** on the  **button.**

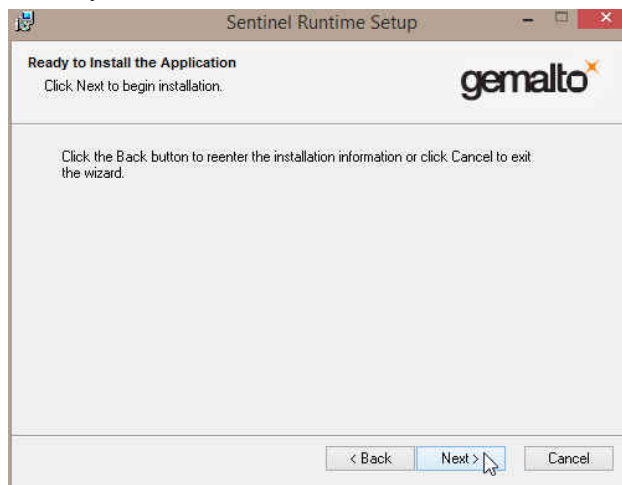

9.) This will initiate the install windows for the HASP device drivers.

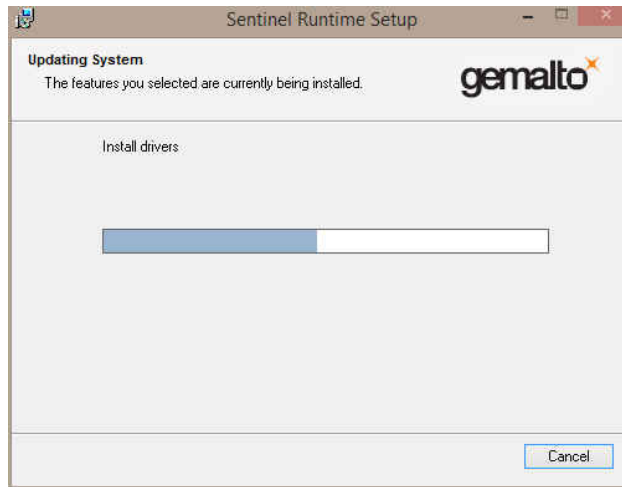

10.) When the installation is complete the program will activate the Successfully Installed window.

Click on the  button

